

IR Dome Camera

Quick Manual

Ver. 2.0 / 2023.10.27

Before installing and using the camera, please read this manual carefully. Be sure to keep it handy for future reference.

Safety Information

These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss.

If the product is not functioning properly or damaged, contact the service center or

ITENTION : Il y a risque d'explosion si la batterie est remplaée par une batterie de type inc

WARNINGS : Serious injury or death may be caused if any of these warnings are neglected. BATTERY *When using a lithium battery*

- There is a risk of explosion if the battery is incorrectly replaced. The battery should be replaced only with the same battery.
- Used batteries must be disposed of according to local regulations or battery manufacturer's instructions. Disposing of in a fire or in a hot oven, or mechanically crushing and cutting may cause an explosion.
- Leaving the battery in a very high temperature or low air pressure environment may result in an explosion or leak of flamids or gases.

BATTERIE *Lors de l'utilisation d'une batterie au lithium*

- Il y a un risque d'explosion si la batterie est remplacée de manière incorrecte. La batterie doit être remplacée uniquement par une batterie identique.
- Les batteries usagées doivent être éliminées conformément aux réglementations locales ou aux instructions du fabricant. La combustion, le chauffage à haute température, le broyage mécanique ou la découpe peuvent entraîner une explosion.
- Le fait de laisser la batterie dans un environnement très chaud ou à basse pression atmosphérique peut entraîner une explosion ou une fuite de liquides inflammables ou de

POWER

- Use only standardized adapters written in the manual. Incorrect connection of the power source can cause fire, electric shock, or failure.
- If there is smoke or a strange smell from the power source, disconnect the power immediately and contact the service center or purchasing office. If you continue to use it as it is, it can cause fire and electric shock.
- Disconnect the power plug from the outlet before connecting to the power terminal block.

INSTALLATION

- Install it according to the temperature and humidity environment suitable for the product specifications. Otherwise, it can cause fire and electric shock.
- Thunder and lightning can cause problems with the camera. When installing, be careful to minimize damage caused by lightning such as grounding.
- Do not install it in places where there is a lot of moisture, dust, soot, etc. It causes fire and electric shock.
- Avoid places where direct sunlight comes in or where heat comes out, such as heating appliances. It causes fire and electric shock.

CLEANING

Do not spray water directly on each part of the product when cleaning. It causes fire and electric shock.

↑ CAUTIONS : Injury or equipment damage may be caused if any of these cautions are eglected. POWFR

- Use the power line after fixing it firmly to the power connection terminal.
- Do not extend the adapter output cable. If you need to install the power cable extension, please contact the service center.
- Use insulated power for PoE connected external power.

INSTALLATION

- Avoid installing cameras facing bright lights like sunlight.
- Make sure it safe and securely when installing camera on the wall or ceiling. This can cause injury by the fall.
- Do not connect multiple cameras to one adapter. Excess capacity causes abnormal heat and fire
- Wear protective gloves when installing/uninstalling the camera. This causes burns caused by high temperature on the surface of the product.
- Don't drop or shock the product. Please stay away from places where vibration is severe or magnet types are present.

CLEANING

Wipe the contaminated surface with a clean, soft, dry cloth or wet the soft, dry cloth to prevent water from flowing, then wipe the contaminated area.


Installation and Use Precautions

- Do not disassemble the camera at your discretion.
 - If you forcefully install the product with excessive force, malfunction can damage the camera.
- Do not punch or shake the camera and be careful not to damage the camera with careless storage or malfunction.
- Be careful not to install the camera in a rainy or humid place, and do not leave it in a wet place. (For Indoor camera)
- Installing or using the product in water can cause serious product failure.
- Do not install the product if there is chemical or vapor in the place where the product is installed, or if it can be generated.
- Be careful not to get chemicals on the surface of the product when installing the product. Chemical solvents such as cleaning agents and adhesive components can cause fatal damage to the surface of the product.
- Do not install it near the kitchen or cooking table as edible oil such as soybean oil can also cause product damage and deformation. It can cause product damage.
- Be careful not to get foreign substances on the Micro SD card terminal. If there is any foreign substance, wipe it with a soft cloth.
- Data will not be saved at the end of the life of the Micro SD card. In this case, purchase a new Micro SD card.
- Moisture may occur in the glass of the camera when the new product box is opened (or when the product is initially running). The generated moisture is removed by a Gore vent attached to the camera within hours of the power connection.
- 12. For products enclosed with a desiccant or card-type absorbent, please install it according to the manual.
- Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
- Unplug this apparatus when a cart is used. Use caution when moving the cart/apparatus combination to avoid injury from



1. Product & Accessories

Please check if all the camera and accessories are included in the package.

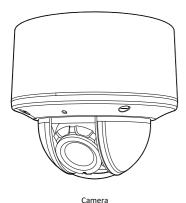































2. Part Name

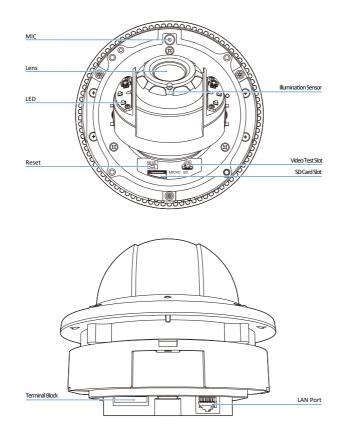


3. Disassemble the camera

Befo read the following cautions.

- 1. You have to check whether the location can bear five times of the weight of your camera.
- 2. Don't let the cable to be caught in improper place or the electric line cover to be damaged. Otherwise it may cause a breakdown or fire.
- 3. When installing your camera, don't allow any person to approach the installation site.

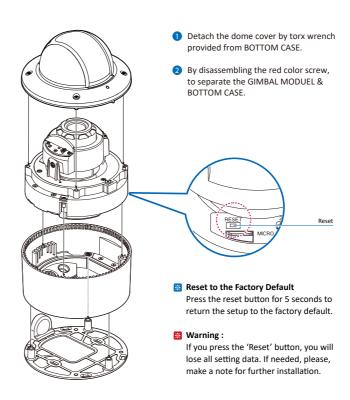


4. Installation - Template Sheet ver.

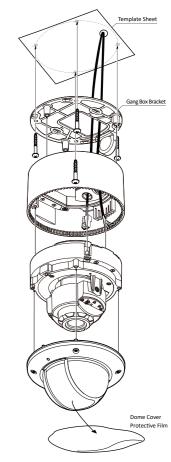


- 1 Disassemble the camera. See the section 'Installation - Disassemble the camera' for details.
- Using the template sheet make the cabling hole on the wall/ceiling.
- 3 Pull wires through and make all necessary connections. See the section 'Installation - Cabling' for details.
- 4 Fix the GANG BOX BRACKET on the ceiling. By tightening the red color screw, to assemble the BOTTOM CASE and gimbal bracket. After then remove of the install guide.
- 5 To achieve desired view direction and orientation, rotate 3-axis gimbal To fix the setting, tighten the tilt stopper screw.
- 6 Attach the dome cover to the bottom
- 7 Detach the protection film from the dome cover.

4. Installation - Mounting Gang Plate to Gang Box (Optional) ver.

Note: The installation method is the same as the Template Sheet version.

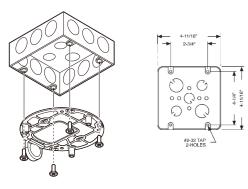

2-Gang Handy Boxes / Switch Boxes

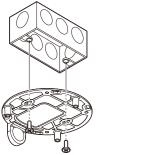

S Relay/Alarm Output (DO)

to the Setup menu setting.

6 Audio Output

speaker.

on the web later.

default.

™ Test Video Slot

It connects to the alarm lights, siren

Connect the 'Audio Out' port of the

camera to the 'Line In' port of the

If the speaker without the amplifier is

connected to Audio Out port, it doesn't

work properly. Therefore, the speaker with

channel function. It plans to make it available

Press the reset button for 5 seconds

When you connect the Test Monitor

Cable to the Test Video Slot, the

screen of CAM1 appears.

 
to return the setup to the factory

the amplifier or the separate amplifier is

Audio Out supports only RTSP Back

Reset to the Factory Default


or lamps, and it is activated according




1-Gang Handy Boxes


5. Adjusting the Camera angle

 Note: Adjust the lens angle and insert the desi-pak before closing the dome cover.



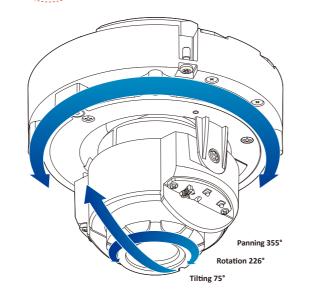

6. Cabling

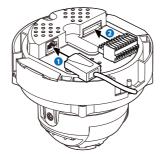

+ -	+ -	+ -	сомоит
DC12V	DI	DO	AUDIO
6	4	6	6

 
How to connect the Network Cable

Refer to the picture below and connect the Network cable.


A Installation Method 1



B Installation Method 2



 - 1. Insert the RJ-45 cap Installer into the Lan cable.
- Remove the Grommet blocking the bottom hole of the camera.
- 3. Pass LAN cable with cap installer through the hole fo GROMMET from bottom to top



Benting the cable can cause water leakage.

Able to delete an Active-X which is


Active-X

installed when accessing to Web

You don't need the function because this

camera use the VLC plugin instead of the

7. IP Installer

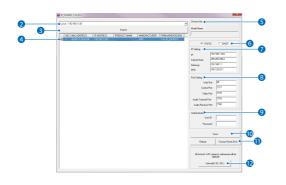

- 1. Run IP Installer
- 1 Run the IP installer in S/W folder.
- 2 Click on Network Adaptor selection Menu (NIC) after run this program.
- Select a network which a camera is connected then click on a 'Search' button. (Takes about 5 sec.)
- 4 Select a camera to set.
- 5 The information of the selected camera will be shown at Device Info.

- 6 Select the network type.
- The default network type of the camera is DHCP mode.
- 1 If you have a DHCP server, it will

after one minute.

- automatically set the Camera IP.

 If you do not have a DHCP server,
 Camera IP is set to 192.168.1.80
- Input IP setting information when the network type is set to STATIC.
- ① Default TCP/IP information
 IP: 192.168.1.80
 Subnet Mask: 255.255.255.0
 Gateway: 192.168.1.1
 DNS: 168.126.63.1

- 8 Change the port as necessary when the network type is set to STATIC.
 - A 'Port Forwarding' has to be set for external access to the camera.

 Refer to the manual of the network hub
 - for 'Port Forwarding' settings.

 1 An additional change of HTTPS, RTSP
 - An additional change of HTTPS, RTSP port can be done at Web Viewer > Admin page.
- Input ID and PW of the camera for authentication.
- Make sure to change the ID and PW for security reason.
- Go to "Web viewer>Setup>System> Users Management" for ID and PW change.
- The ID and PW will be set to default value when 'factory reset' the camera.
- 1 Default ID / PW : admin / admin
- Make sure to click on 'Save' button to save changed values.
- An "Apply" message will be popped-up when the settings are applied normally, or an error message will be popped-up when failed.
- 1) To reboot or reset (except network setting) the camera.
- Select a camera (multiple camera can be selected) > Input ID and PW > Click on Reboot or Factory Reset button.

...

Contents

RJ-45

100m

Note: Connect all the wires, turn the terminal block according to the shape and insert it.

3 Power Connection Please check the correct voltage.

4 Sensor/Alarm Input (DI)

Cable of the sensor/alarm input device should connect to + and - of the Terminal Block.

2 Terminal Block Connection

Nertwork Connection

Item

Connector

Max Distance

PoE

Disposal of Old Appliance



- When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- All electrical and electronic products should be disposed of separately form the municipal waste stream in accordance to laws designated by the government or the local authorities
- The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.



Note: This products is covered by one or more claims of the HEVC Patents listed at patentlist.accessadvance.com